

HDG room control unit LIGHT



The HDG room control unit LIGHT forms an extension for the weather-compensated heating control HDG Control. It is comprised of a plastic housing with a 4-hole attachment, allowing it to be mounted on vertically or horizontally installed flushed-mounted boxes.

The HDG room control unit LIGHT provides the option of activating or deactivating the heating circuit. A dial can also be used to change the target room temperature of the heating circuit by +/- 6 °C (without factoring in the actual room temperature).

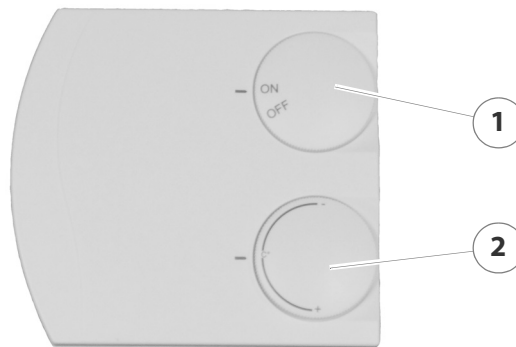


Figure 1/1 - Room control unit LIGHT

- 1 Dial for heating circuit operating mode
 - "ON": Heating circuit is activated
 - "OFF": Heating circuit is deactivated
- 2 Dial for target room temperature
 - "+": Increase the target room temperature by up to 6 °C
 - "-": Decrease the target room temperature by up to 6 °C

ACTIVATING THE ROOM CONTROL UNIT LIGHT



1. Press the *Basic settings* sub-menu on the settings page in the respective heating circuit.
 2. Scroll to the parameter (60-65)-29 *Room control unit*.
 3. Use the *Right* or *Left* buttons to select the *Room control unit LIGHT* setting.
 4. Confirm your input by pressing the *Confirm* button (4).
- ✓ The room control unit LIGHT has been activated.

