

Assembly instructions

Replacing the 3.6 V battery




Komfortabel
heizen. Mit Holz!

Before handling the heating system it must be switched off and disconnected from the mains supply!

Disconnect the system from the mains using the building cut-off switch!


Caution: Risk of fatal injury from electrical current!

1.)

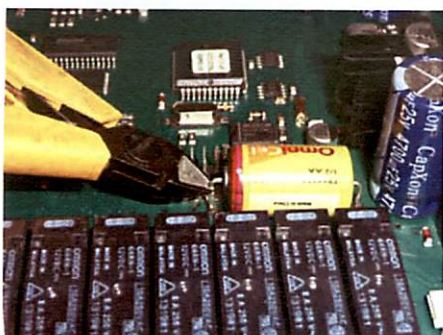


Remove the battery using wire-cutting pliers.

2.)

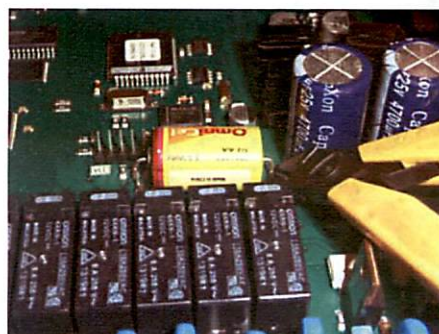


Pinch off the wires directly after the bend. Ensure the residual length of the pins is about 7mm.

3.)

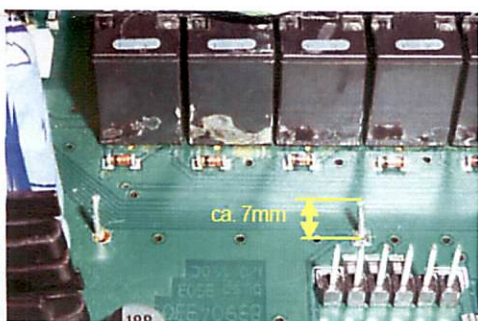


The residual length of the pins should be about 7mm.

4.)

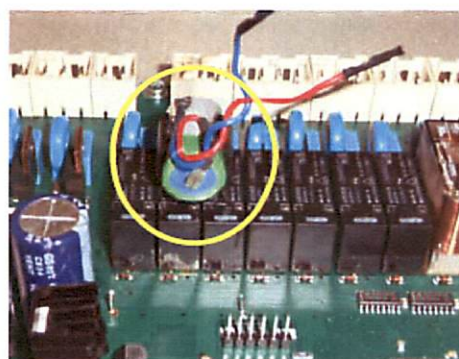

Affixing the new battery. Remove the protective film from the bottom and affix the holder to the relays.

5.)

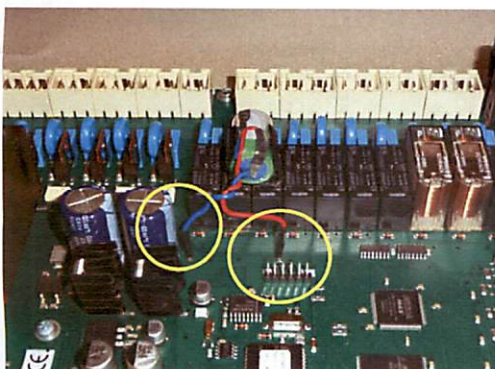

Connect the battery!

**Important: Pay attention to the polarity!
Incorrect polarity will destroy the components!**

Attach the - terminal (blue cable) to the pin close to the capacitor.

Attach the + terminal (red cable) to the pin close to the pin header.